


# Fulham Parcel Box

3008M / 3008L

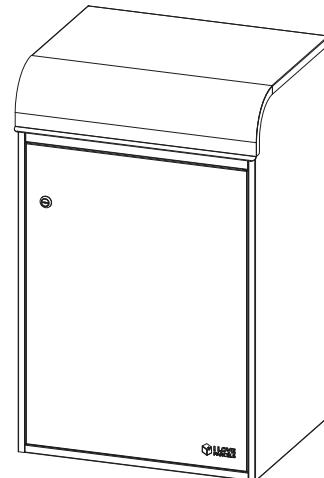

## Tools required

Hammer drill

10mm masonry drill bit OR 10mm wood drill bit





## Keep spare keys in a safe place



Blank keys are available for purchase on our website

### Mounting onto a Brick Wall

1. Mark hole locations, drill four 10mm holes and insert wall plugs provided.

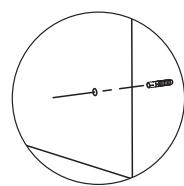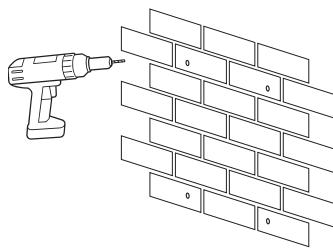


2. Mount the letterbox onto the brickwork with the washers and screws/bolts provided.

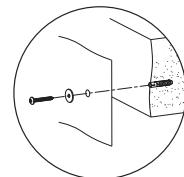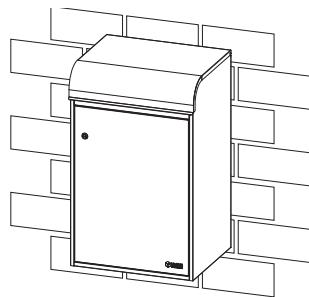

### Mounting onto a Timber Fence

1. Mark hole locations and drill four 10mm holes.

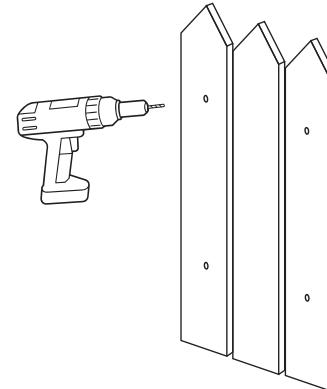

2. Mount letterbox to the fence with the screws/bolts provided.

